
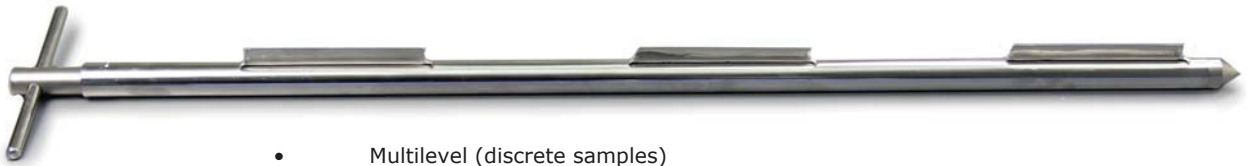


## Cohesive Pocket Sampler

Zone sampling of Cohesive powders

The Cohesive Pocket Sampler has been specially adapted from the Pocket Sampler (on pages 36 & 37) to enable the taking of samples from damp and cohesive powders.

Scrapers have been added to push the sticky powder into the sample pockets. Scrapers are fully welded to give a hygienic, GMP correct sampler.

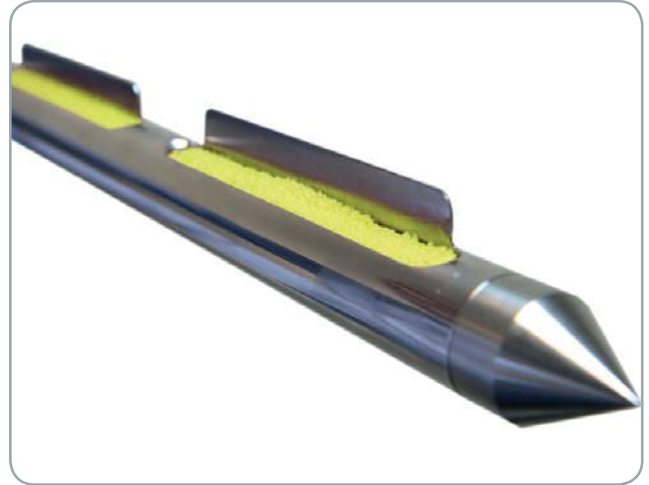


- Multilevel (discrete samples)
- 316 Stainless steel construction
- Suitable for sticky, cohesive powders

B900

### Operation

1. Insert the sampler into the product
2. At the required depth rotate handle to expose the collecting pockets.
3. Rotate the sampler through 360° so the product is pushed into the collecting pockets
4. Rotate handle to close pockets and remove sampler.

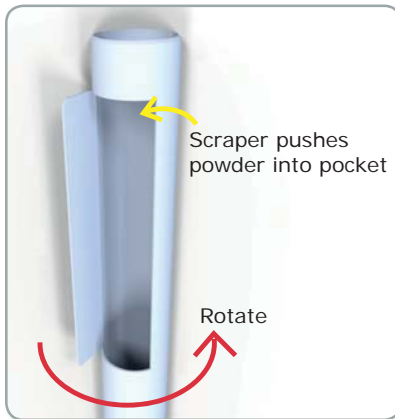

QUOTE REQUEST ✓

BUY ONLINE ✓

Stock No.	Length	No.Pockets	Pocket Volume	Material	Diameter
675 2220B600	600mm	3	15ml	316ss	25mm
675 2220B900	900mm	3	20ml	316ss	25mm
675 2220B1500	1500mm	5	20ml	316ss	25mm

675 TIP2      Rounded Tip (Sampler supplied with pointed tip)

Cleaning Brushes - see page 129

Sampler Cases - see page 130

XRF Certification - see page 139

\* Diameter does not include scrapers. Scrapers are approximately 10mm high