

## QAQC Powder Lance


Cross Sectional Sampler for Cohesive Powders

The Powder Lance can be used to take large volume samples of cohesive powders. The sampler can be used horizontally through a sack or else it can be used vertically.

- Cross sectional sampler
- 316 stainless steel
- Suitable for sticky cohesive powders

### Operation

1. Insert the sampler into the product.
2. Rotate the sampler through 360°. The scraper forces the powder in to the sampler along the length of the slot.
3. Remove the sampler.
4. Unscrew the tip of the sampler.
5. Push the Sample Ejection Rod into the Powder Lance to push out the sample

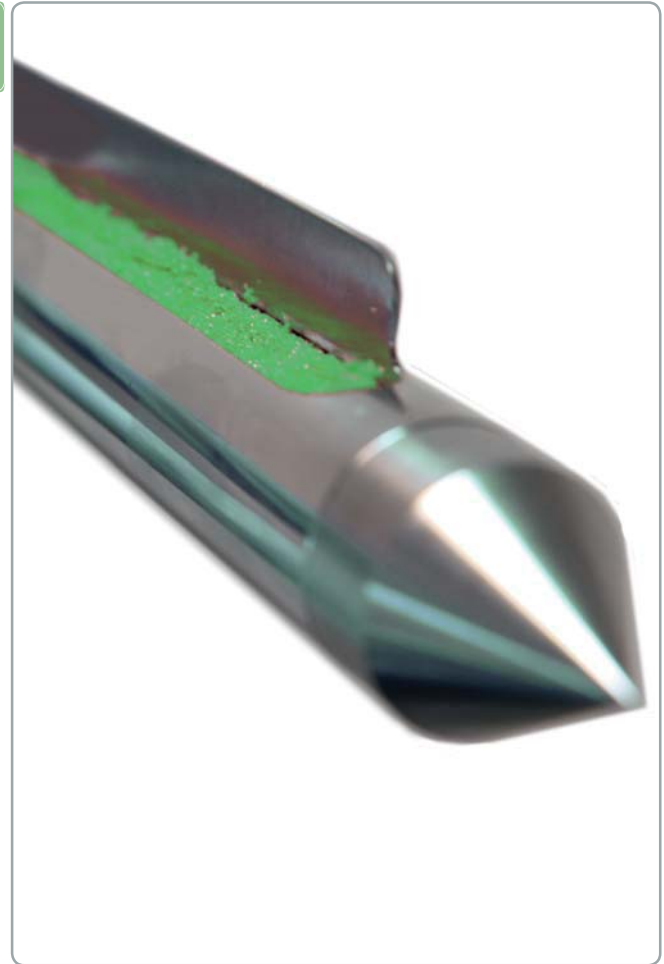

Cohesive Powders



QUOTE REQUEST 

BUY ONLINE 

Stock No.	Sampler Length	Slot Length	Max Sample Volume
675 2250A600	630mm	540mm	190ml
675 2250A1000	1030mm	930mm	300ml
675 2250A2000	2030mm	1500mm	520ml

675 8570A700	Sample Ejection Rod - 316 stainless steel - 700mm length
675 8570A1100	Sample Ejection Rod - 316 stainless steel - 1100mm length

Cleaning Brushes - see page 129

Sampler Cases - see page 130

XRF Certification - see page 139

675 TIP2 Round tip (sampler supplied as standard with pointed tip)